

# LF-Sizer Recommended Spare Parts



Having a few key spare components can significantly save you time and money and keep your system running in its best shape.

We suggest stocking the following critical spare parts to avoid costly machine shut downs, to keep your system up and running:



## **ASNE-R Sensor for Layflat Control** Range 5-20" / 127-508mm

- (Average life: 5-7 years)
- Over time the ultrasonic signal can become weaker, resulting in a less accurate layflat reading / control



## **ESNE-R Sensor for Layflat Control** Range 5-40" / 127-1,016mm

- (Average life: 5-7 years)
- Over time the ultrasonic signal can become weaker, resulting in a less accurate layflat reading / control

\* For applications with existing ESN sensors



## **Pneumatic Box Carbon Filters (Box of 4) AU10-050X1**

- (Average life: 6 months)
- Contaminated air can lead to waxy build-up in the pneumatic controller filter, leading to sluggish system response.
- Replacements filters fit directly into the blue canister on the pneumatic controller.



## **Sensor Cables: PST-BSE-y (y = 3, 5.5, 7, 10, 15, 20 meters)**

- Layflat sensor cables can be damaged, cut or worn with use or improper set-up.

\*Please provide system serial number / cable length

### Delivery and Warranty:

- In stock items will ship same day.
- All components and accessories of the IS-IBC1® system provided by D. R. Joseph, Inc. are covered by a 12 month parts and phone support warranty.

D.R. Joseph, Inc.  
921 W. Harris Rd.  
Arlington, TX 76001  
USA

Tel.: +1-817-987-2030  
FAX: +1-817-987-2043  
sales@drjosephinc.com